



**REFERENCE NUMBER:** HMT-0050-03-E  
**SUBJECT:** P Series Operator's Manual recall  
**EFFECTIVE DATE:** June 16th, 2005  
**APPLICABLE SERIES:** P  
**APPLICABLE SERIAL NUMBERS:** N/A

---

### **SCOPE OF MEMO**


In order to meet international and North American regulations for the "P" Series, Hydro-Mobile's R&D Department was instructed to prepare the following:

- 1-A Recall package covering a new Operator's Manual Release 3.1 with its casing and attachments to store it on the motorized unit. Also included, revised capacity charts to be screwed on the motorized unit.
- 2- New instructions to Production Department in relation with the previous paragraph on how to proceed with the present Recall and future assembly of units.

Full Recall package will concern units having serial numbers #PU0000 to PU0104 inclusively. For motorized units PU105 and higher, partial recall is to be performed, as described hereafter.


### **MATERIAL**

The Production Department, must gather and prepare the following material whether for new units or Recall package:

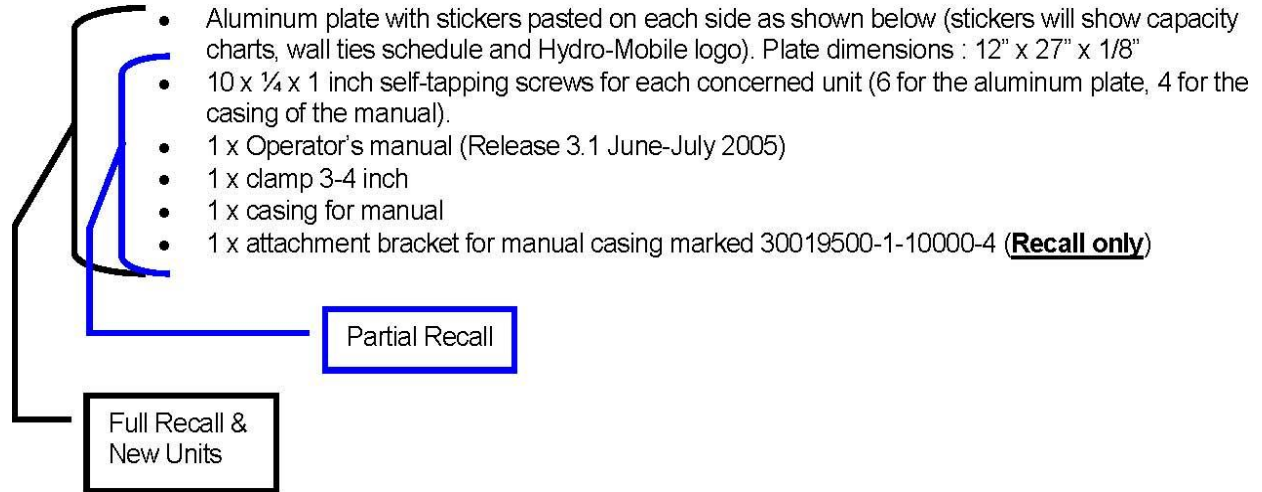

**PROCEDURE**

The procedure to install the aluminum plate on the guard rail is as follows:  
Install aluminum plate with charts on internal side of guardrail as shown with 6x self tapping screws and paste Hydro-Mobile logo on the other side.

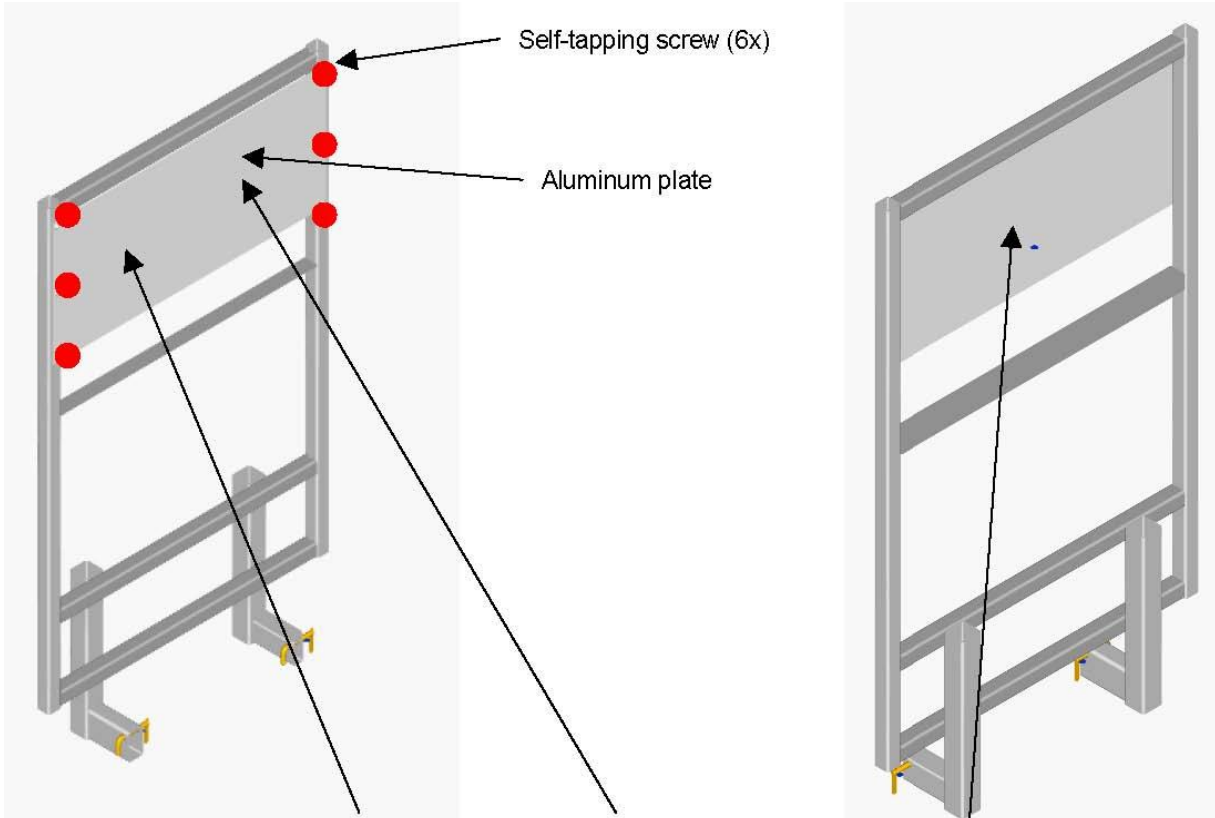

**WARNING / AVERTISSEMENT / AVISO**

**ENGLISH**  
 Read and understand all instructions, warnings and precautions before using this equipment. Failure to do so may result in personal injury or property damage. This equipment is not to be used for any purpose other than that intended by the manufacturer. For more information, please contact your local distributor or the manufacturer.

**FRANÇAIS**  
 Lire et comprendre toutes les instructions, avertissements et précautions avant d'utiliser cet équipement. Le non-respect de ces consignes peut entraîner des blessures personnelles ou des dommages matériels. Cet équipement ne doit être utilisé que pour les fins prévues par le fabricant. Pour plus d'informations, veuillez contacter votre distributeur local ou le fabricant.

**ESPAÑOL**  
 Leer y comprender todas las instrucciones, advertencias y precauciones antes de utilizar este equipo. El incumplimiento de estas instrucciones puede resultar en lesiones personales o daños materiales. Este equipo no debe utilizarse para ningún propósito distinto del que tiene previsto el fabricante. Para obtener más información, póngase en contacto con su distribuidor local o con el fabricante.

Model	Serial No.	Part No.	Qty.	Part No.	Qty.	Part No.	Qty.
0001	0001	0001	0001	0001	0001	0001	0001
0002	0002	0002	0002	0002	0002	0002	0002
0003	0003	0003	0003	0003	0003	0003	0003
0004	0004	0004	0004	0004	0004	0004	0004
0005	0005	0005	0005	0005	0005	0005	0005
0006	0006	0006	0006	0006	0006	0006	0006
0007	0007	0007	0007	0007	0007	0007	0007
0008	0008	0008	0008	0008	0008	0008	0008
0009	0009	0009	0009	0009	0009	0009	0009
0010	0010	0010	0010	0010	0010	0010	0010

**WARNING / AVERTISSEMENT / AVISO**


**ANCHORS / ANCRAGES / ANCLAS**  
 Read and understand all instructions, warnings and precautions before using this equipment. Failure to do so may result in personal injury or property damage. This equipment is not to be used for any purpose other than that intended by the manufacturer. For more information, please contact your local distributor or the manufacturer.

**MUJERES / ATORNILLAJES / ANCLAS**  
 Read and understand all instructions, warnings and precautions before using this equipment. Failure to do so may result in personal injury or property damage. This equipment is not to be used for any purpose other than that intended by the manufacturer. For more information, please contact your local distributor or the manufacturer.

Model	Serial No.	Part No.	Qty.	Part No.	Qty.	Part No.	Qty.
0001	0001	0001	0001	0001	0001	0001	0001
0002	0002	0002	0002	0002	0002	0002	0002
0003	0003	0003	0003	0003	0003	0003	0003
0004	0004	0004	0004	0004	0004	0004	0004
0005	0005	0005	0005	0005	0005	0005	0005
0006	0006	0006	0006	0006	0006	0006	0006
0007	0007	0007	0007	0007	0007	0007	0007
0008	0008	0008	0008	0008	0008	0008	0008
0009	0009	0009	0009	0009	0009	0009	0009
0010	0010	0010	0010	0010	0010	0010	0010



The Operator's manual casing attachment bracket will have to be mounted on the 4x2 rectangular tube as shown on the picture below with 4 self-taping screws. Then, use the clamp to fix the casing in place with Release 3.1 of the Operator's manual. On new units, please weld the attachment bracket as described in PIP-057 issued last April 22<sup>nd</sup> 2005 and add casing with Release 3.1 of the Operator's manual.

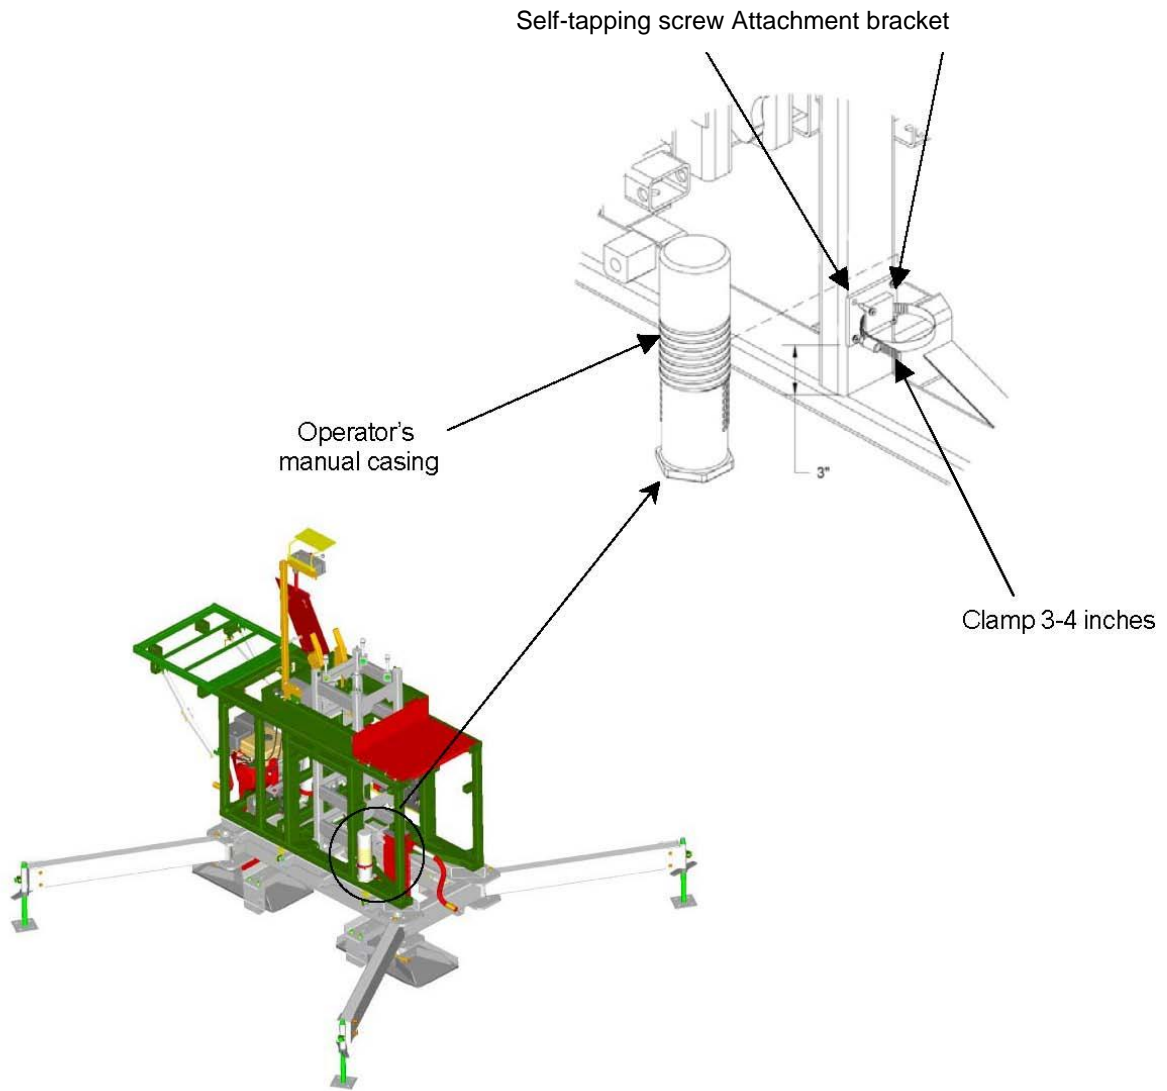

**For Distributors, please note that all previously released copies of the P Series manual MUST BE RETURNED to Hydro-Mobile.**